



(3) Install the dispenser to the wine spear head, Tighten clockwise to ensure a leak-free seal

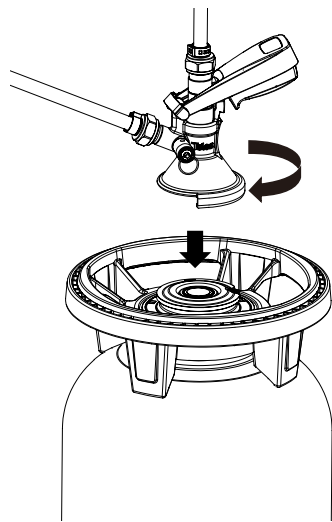


(4) Release the lock of the dispenser handle and move it downwards Press the handle until it locks, ensuring the dispenser is in place. In open state

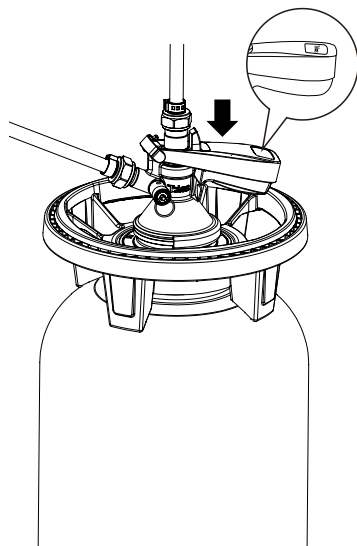

(5) Open the gas cylinder and pressure reducing valve switch, adjust Adjust the appropriate pressure and then Drinking wine

10. Empty barrel depressurization and recycling

(1) Turn off the gas source;
(2) Unlock the dispenser handle and pull it upwards. Highest bit, ensures the dispenser is closed

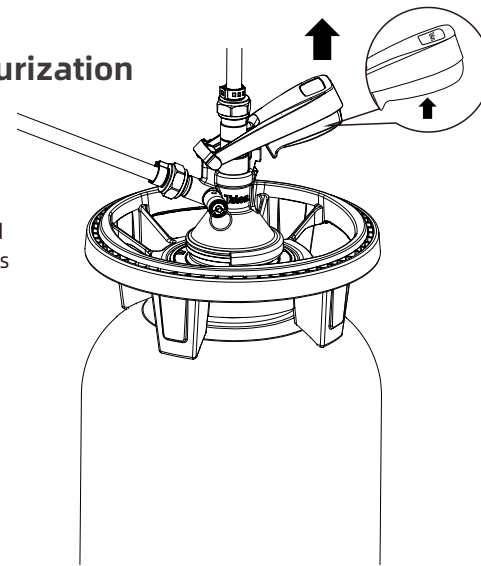

(3) Rotate counterclockwise and remove the distributor

